



PILOT DEVICE LEGEND

R1. HAND-OFF-AUTO SWITCH ILLUMINATED (GREEN)

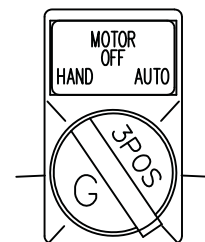


PILOT DEVICE LEGEND

R2. HAND-OFF-AUTO SWITCH ILLUMINATED (GREEN)

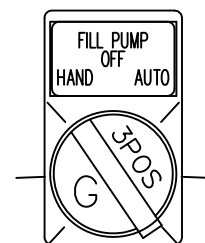


R3. FUEL OVER FILL ILLUMINATED (RED)

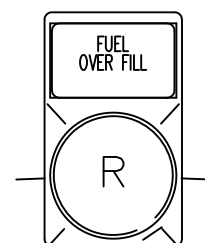

NOTES: CONTROLLER MAIN POWER SWITCH IS NOT SERVICE RATED, MUST SUPPLY A SERVICE RATED DISCONNECTING MEANS IF CONNECTED TO SERVICE POWER.

ALL DIMENSIONS ARE SHOWN IN INCHES AND CENTIMETERS ([]).

FUEL TRANSFER PANEL OUTLINE

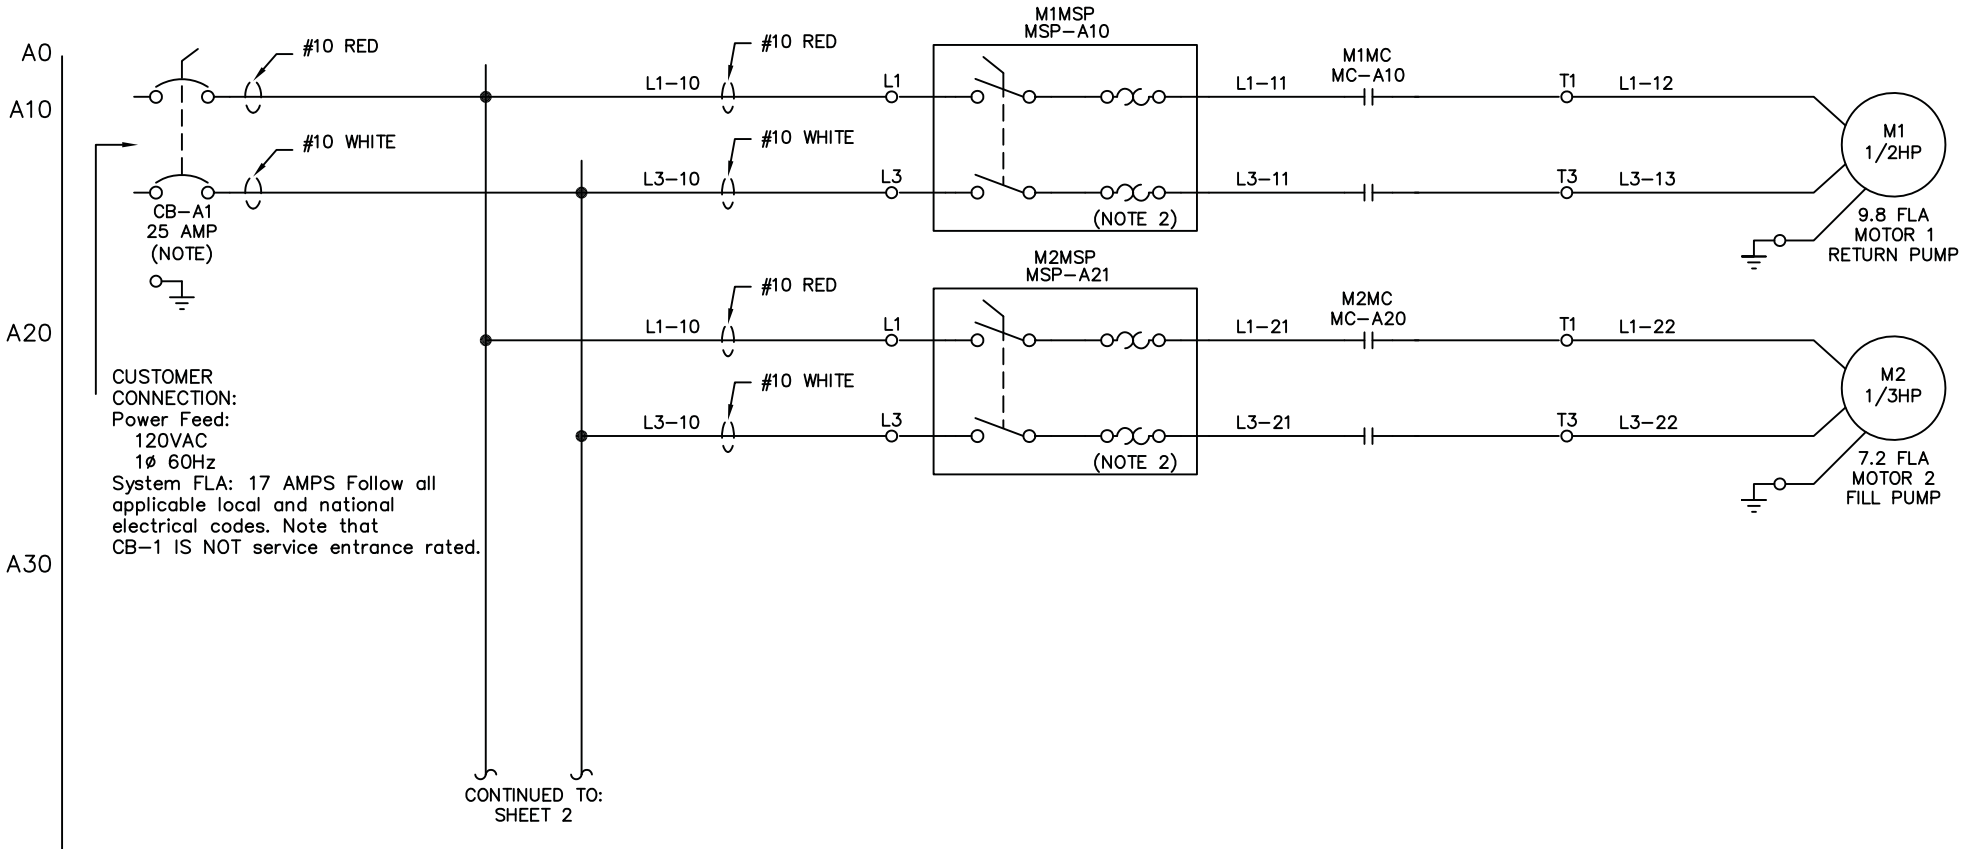


(NOTE 1) - TO REDUCE THE RISK OF FIRE, REPLACE ONLY WITH
 - SAME TYPE AND RATING OF FUSE AS ORIGINALLY INSTALLED OR EQUAL.

(NOTE 2) - SET OVERLOAD RELAY SETTING TO THE NAMEPLATE AMPS
 - OF THE RESPECTIVE MOTOR.

FUEL TRANSFER PANEL
 SCHEMATIC



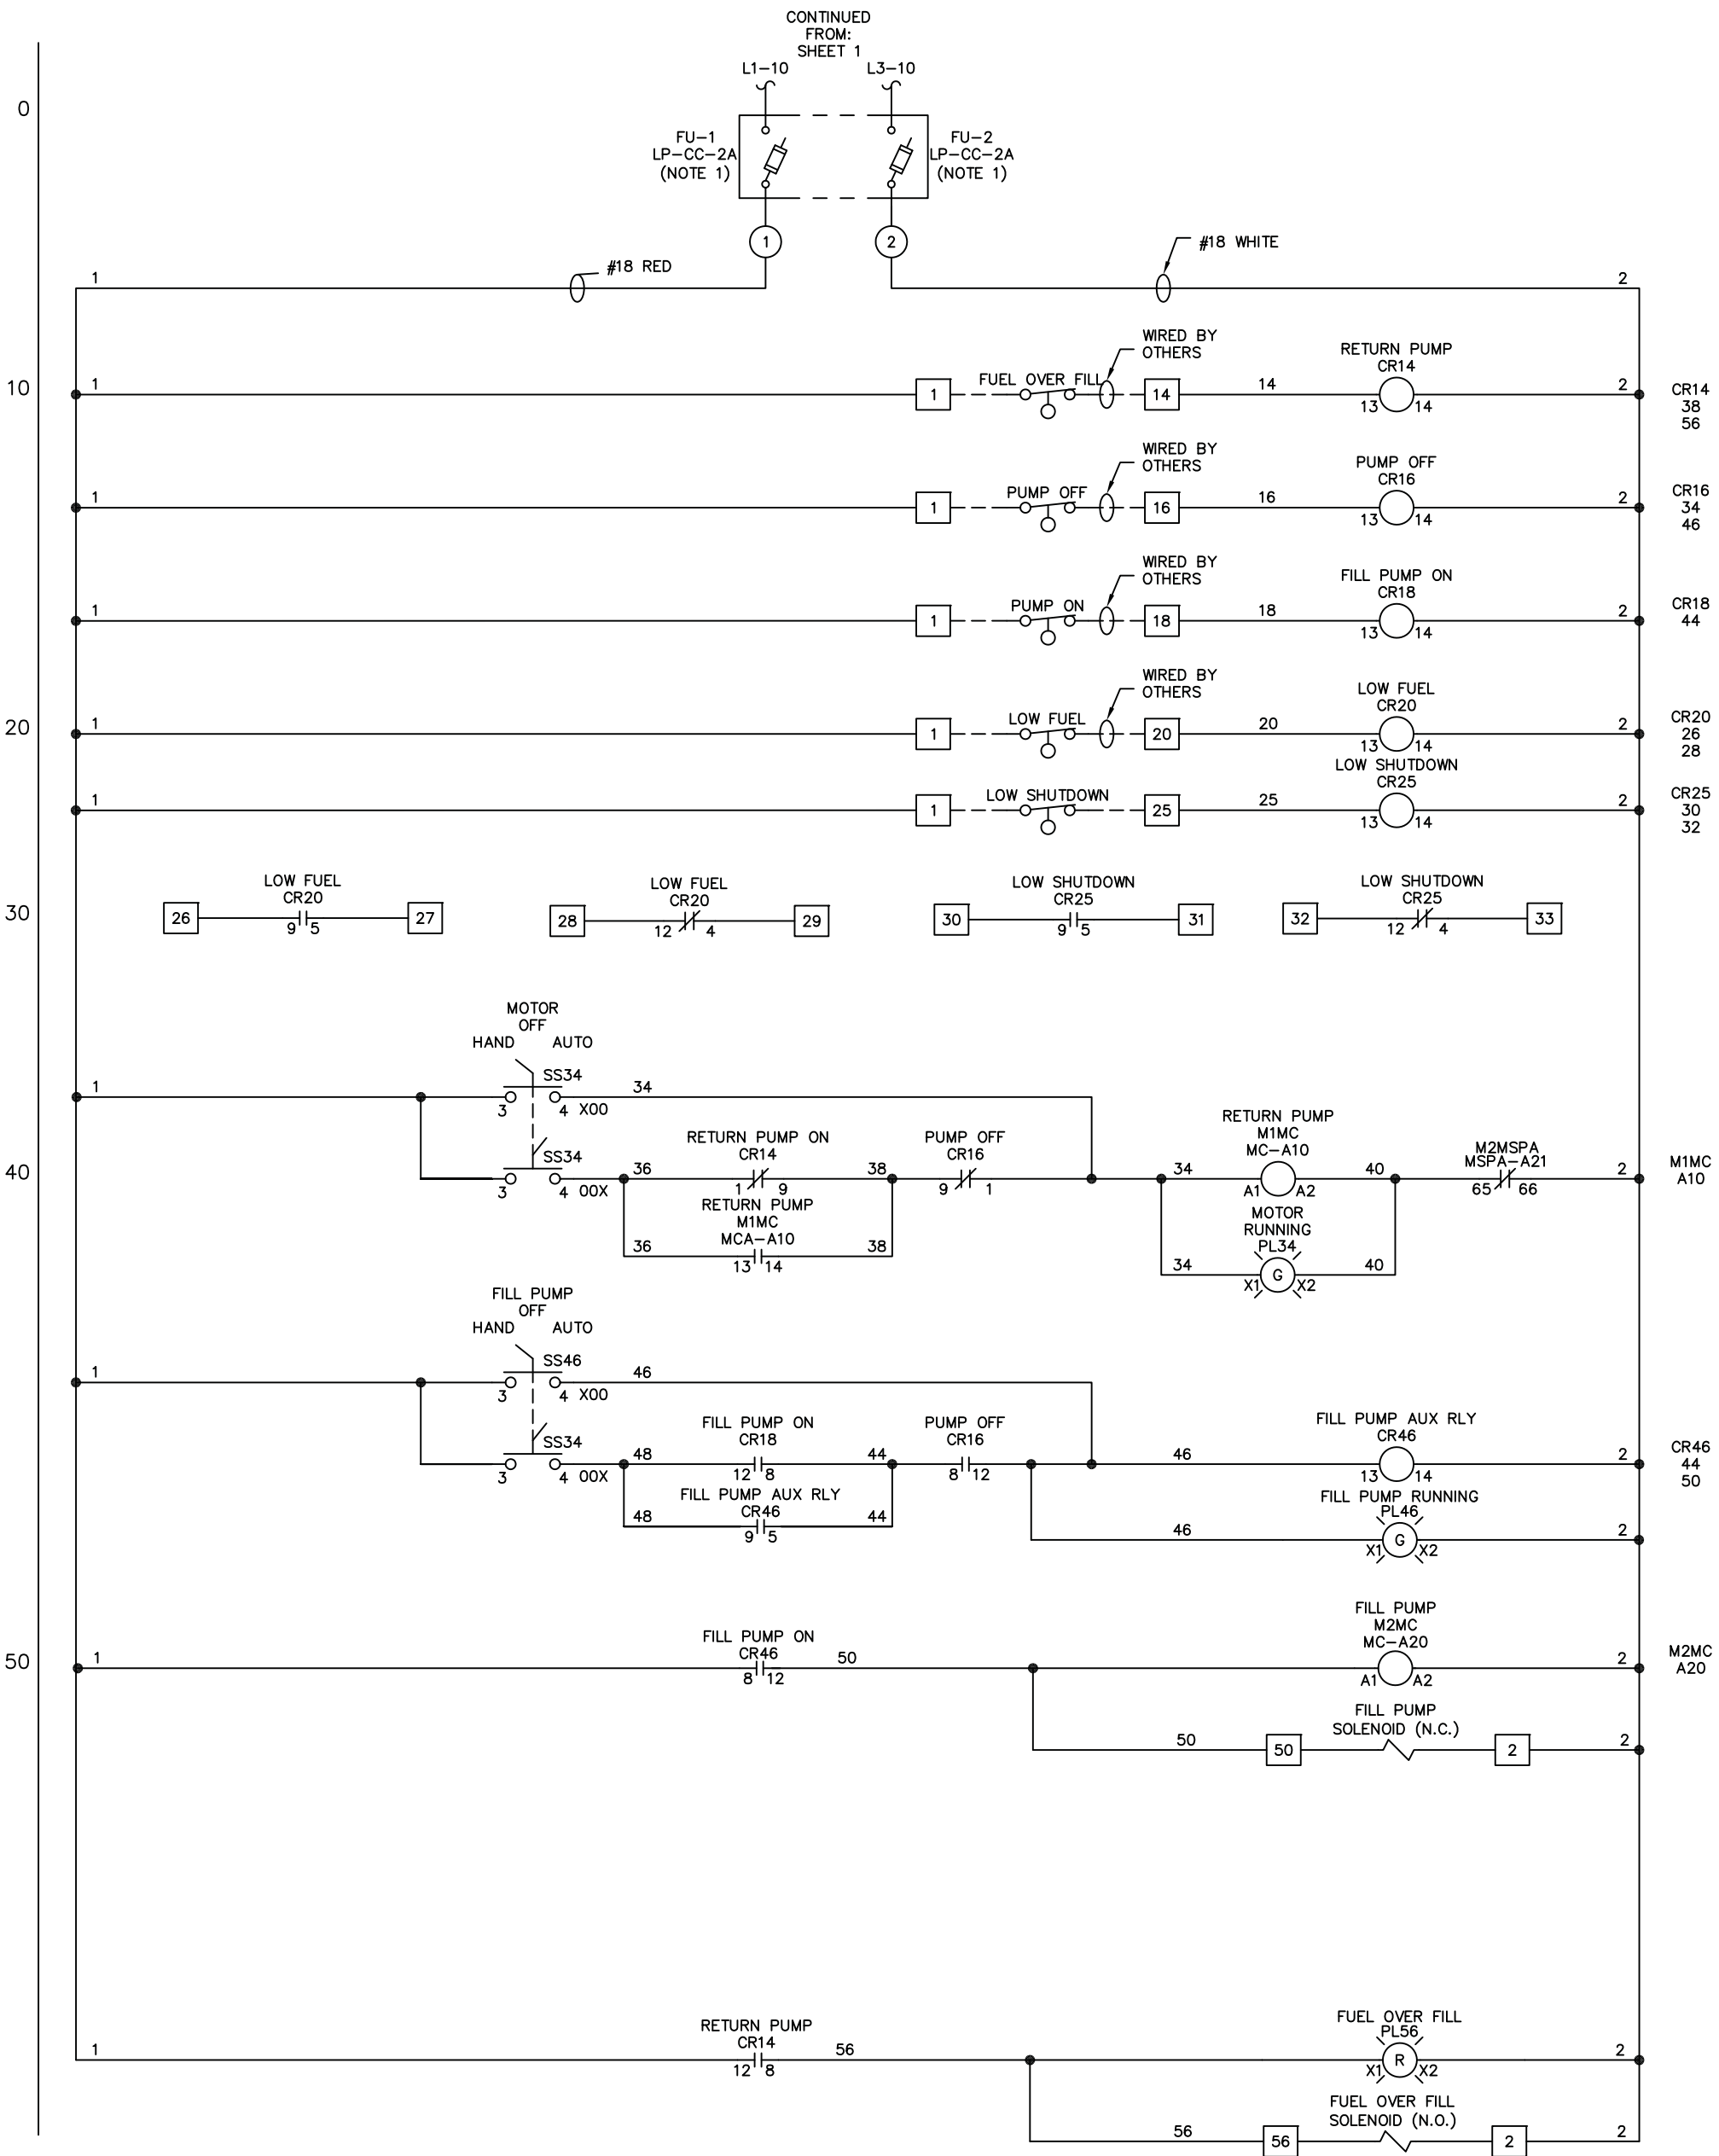

(NOTE 1) - TO REDUCE THE RISK OF FIRE, REPLACE ONLY WITH
 - SAME TYPE AND RATING OF FUSE AS ORIGINALLY INSTALLED OR EQUAL.

(NOTE 2) - SET OVERLOAD RELAY SETTING TO THE NAMEPLATE AMPS
 - OF THE RESPECTIVE MOTOR.

FUEL TRANSFER PANEL SCHEMATIC

